



Cheego

# Smart Baby Monitor

Quick Start Guide

# CONTENTS:

• Packing List .....	2
• Safety .....	4
• Product Introduction.....	5
• Installation .....	6
• Instructions .....	8
• Cheego Smart Application Setup Guide .....	10
• APP Main Page Features .....	13
• Attentions .....	14
• Guarantee & Warranty .....	15


## Packing List

### ► Clip-on Mounting

2



Baby Camera x 1

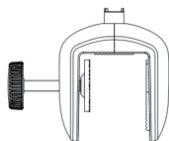

Crib Clip Bracket x 1



Allen wrench x 1



M8\*25 Screw x 1



Power Adapter x 1



Quick Start Guide x 1


► Floor Stand Mounting



Baby Camera x 1



Bracket x 2



Counterweight plate x 1



Power Adapte x 1




Quick Start Guide x 1

## Safety




**⚠ WARNING: Strangulation Hazard**—Children have **STRANGLED** in cords. **NEVER** attempt to use cord without the protective covering. Check protective covering before each use to ensure that the cord is not exposed to your child. Immediately discontinue use if protective covering is damaged or broken.

4

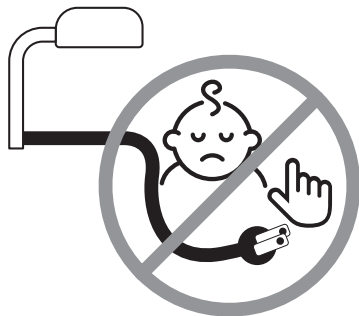

- This device is designed to be used on or next to a standard crib, in the middle of the headboard.
- Adult assembly is required. Keep small parts away from children when assembling.
- This product cannot replace adult supervision. Ensure your child's health by checking on him/her regularly.
- This device is designed for indoor use only.
- This product and its packaging are not toys. Do not allow children to play with them.
- Falling warning---In order to prevent products fell to hurt, be sure to install the monitor in a stable location, tighten the screws and tighten button, securely monitor your device.


## Product Introduction

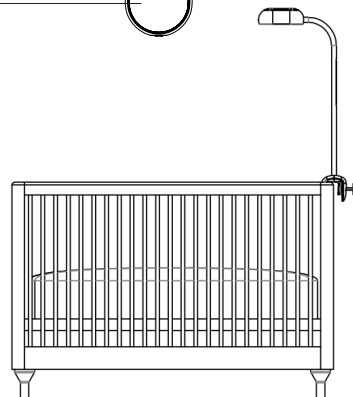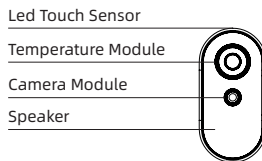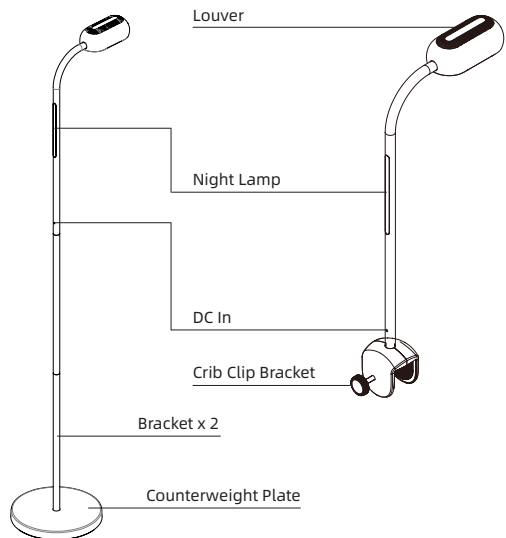

## Installation

Cheego Baby Monitor supports two installations: Clip-on Mounting and Floor Stand Mounting. Please watch the installation video before you start install it.

6

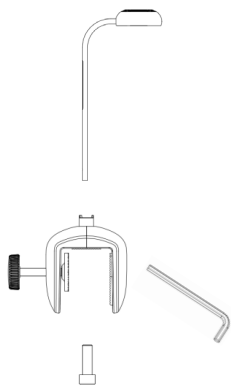

### 1) Clip-on Mounting


- The device is with Temperature Measurement function, so you need to choose one position from below three positions to install.
- Use the Allen wrench and M8\*25 Screw to connect the camera and the clip bracket, then to fix the baby monitor to the selected position on the crib and tighten the screw.

Step1: connect the camera and the clip bracket

Step2: Use the Allen wrench and M8\*25 Screw

Step3: Fix the baby monitor to the selected position

(EX: ①②③ ) on the crib and tighten the screw

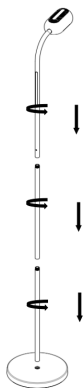

## 2) Floor Stand Mounting

- Screw up the two aluminum rods, and tighten it with the counterweight plate, then connect the camera with the fixed aluminum rod.

### Tips:

- Cheego Smart Baby Monitor adopted back-illuminated night vision mode to avoid the infrared light directly illuminate at the baby's eyes. Thus, please install the baby monitor against the wall (or any place which could reflect light).



### Tips:

1. The device is with Temperature Measurement function, so you need to put the device on one position from above three positions.
2. Position ① (headboard) is the best installation position for temperature measurement.



## Instructions

- **Boot**


Please connect the camera and the power adapter. Once the device power on, after 5 seconds, the LED light will turn on. After 10 seconds, the LED light will turn off. As same time, the new device enters the initialization state. Please wait about total 35 seconds and hear the device boot up successfully.


8



- **Get Start Cheego Smart APP**

Download the Cheego Smart App from Apple Store or Google Play. Or scan the QR code on the device or in the manual.

 Cheego Smart APP will upgrade and update. The actual operation may be different from the above description, Please follow the instructions in the current version.

 When connecting, please keep the network good and the monitor turned on. 5GHz Wi-Fi network is unavailable. Please set it to 2.4GHz first.



## Cheego Smart Application Setup Guide

Follow the in-app instructions to set up your Cheego Smart Camera: Homepage > Add your device> Scan QR code to connect>Pair succeed> Choose installation way> Choose installation position.


Tips:

1. Add device or device initialization. If it is a new device, click next directly. To pair network. If it is an old device, Please click “configure the network by steps”, and refer to picture 2) and 3) for device initialization.

10



(1)

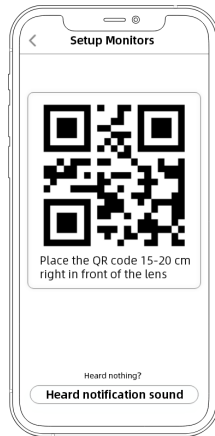


(2)



(3)

Tips:


1. Cheego Only supports 2.4GHz Wi-Fi network & Enter the password. 5GHz Wi-Fi network is unavailable. Please set it to 2.4GHz first.
2. Place the QR code 15-20 cm right in front of the lens. Scan and pair network.

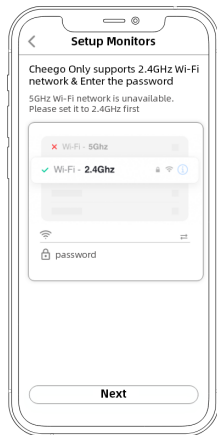

(4)



(5)

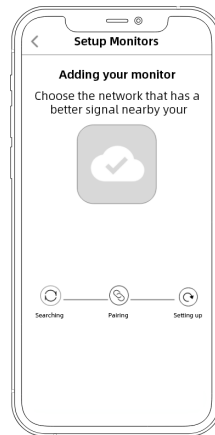


(6)


## Tips:

1. Select installation positions. Please make sure the actual installation position keep same with the virtual installation position in your Cheego Smart App.
2. Please check if the camera could capture baby's facial image in your Cheego Smart APP after the installation and setting. If not, please adjust the installation position or angle.


12

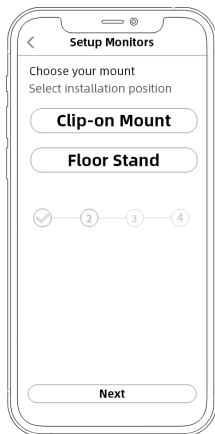

(7)

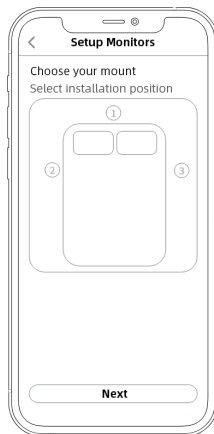


(8)

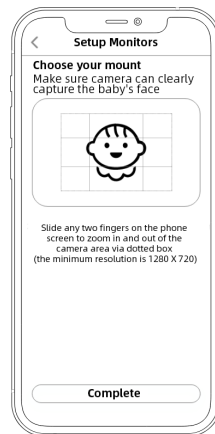

(9)

## APP Main Page Features

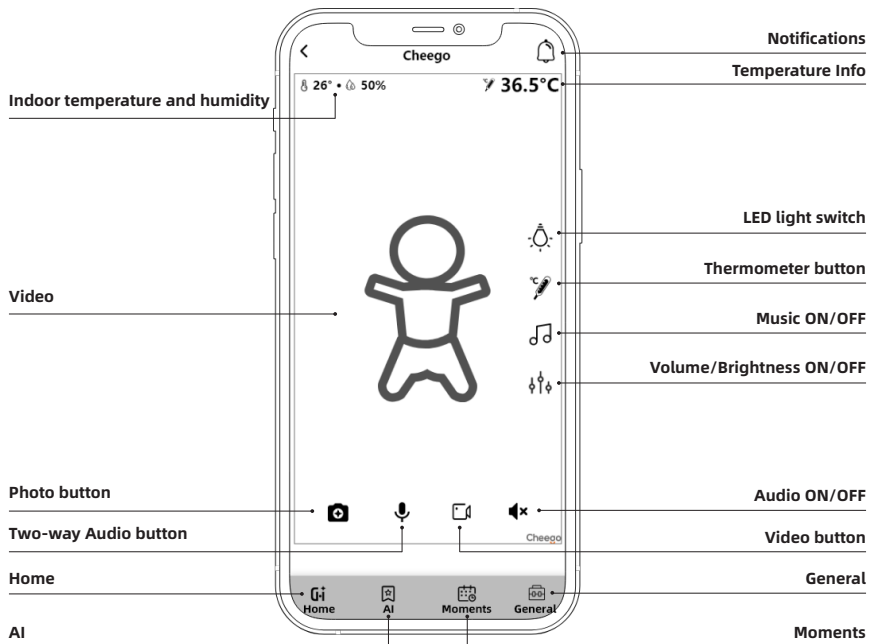

## ATTENTIONS

1. To ensure the accuracy of temperature measurement, please use at room temperature 16 ~ 35 ° C
2. This product is a precision electronic product. Do not use it in an environment that is excessively humid or may cause water to enter the product. Avoid damaging the device.
3. Please ensure that this product is installed within the coverage of the Wi-Fi signal, and place it in a location with a better Wi-Fi signal as much as possible. Install as far as possible away from metal and microwave ovens that may affect the signal.
4. Before temperature measurement, make sure your baby has not been bathed, exercised or fed for 50 minutes and is physically and emotionally stable
5. Before temperature measurement, if there is a temperature difference between the monitor and the measurement environment, please leave the monitor for at least 50 minutes. Otherwise, there may be errors in the temperature measurement results.
6. Make sure that your baby's forehead is free of sweat, oil, etc. before taking the temperature.
7. This product is not waterproof. Please be careful to avoid liquids entering the product. When this product is wet due to contact with steam, please gently wipe it with a clean paper towel or dry cloth, otherwise it will cause measurement errors.
8. We deeply value user's privacy. All videos can only be stored on local TF card on the camera.
9. The built-in TF card is with 32GB. Continuous loop recording will automatically overwrite the oldest footage. It is recommended that users can download wonderful videos to their mobile phones for permanent storage.

## GUARANTEE & WARRANTY

### SATISFACTION GUARANTEE & RETURN POLICY

Thank you for purchasing Cheego products. If you are not completely satisfied with your purchase, you may return the product for a full refund within 30 calendar days of setting up a hardware product (icheego.com) or within 15 days of activating an online product (Cheego authorized online reseller). This satisfaction guarantee requires proof of purchase from an authorized seller. Purchases from 3rd party retailers will need to be returned to the original place of purchase.

### LIMITED WARRANTY

This limited warranty contains important information about your rights and obligations, as well as limitations and exclusions that may apply to you.

This limited warranty only applies if you are original purchaser, use and operate the product in the United States or Canada. Please note if you are not resident of the United States or Canada, this Limited Warranty & Return Policy does not apply to you.

### **PRODUCTS OBTAINED FROM UNAUTHORIZED RETAILERS ARE NOT COVERED BY THIS LIMITED WARRANTY.**

Please be aware that there are some retailers and websites that claim to be authorized retailers of Cheego when they are not. Note that when you purchase from these unauthorized retailers, you are taking a risk, including a risk that these products are used or defective, and this limited warranty will not apply.

### **1. WHAT THIS LIMITED WARRANTY COVERS?**

**PERIOD OF COVERAGE.** Warrants to the owner of the enclosed product that the product contained in this box ("Product") will be free from defects in materials and workmanship for a period of one (1) year from the date of delivery following the original retail purchase (the "Warranty Period"). If you believe you have



received a defective product, we will either repair or replace the defective product or its defective component part(s) in accordance with the terms of this limited warranty. We warranty the replacement for the remaining unexpired period of the original product's warranty. This limited warranty is the only warranty available for our products.

## 2. WHAT THIS LIMITED WARRANTY DOES NOT COVER?

- Products marked as “sample” or “Not for Sale”, or sold “AS IS”;
- Ineligible Products that have been subject to:
  - (a) Modifications, alterations, tampering, or improper maintenance or repairs;
  - (b) Handling, storage, installation, testing, or use not in accordance with the Terms of Service or other instructions provided by Cheego;
  - (c) Abuse or misuse of the Product;
  - (d) Damages caused by Acts of God, including but not limited to lightning, flood, tornado, earthquake, or hurricane;
- Consumables parts, including but not limited to batteries, unless damage is due to defects in materials or workmanship of the product;
- You use unauthorized service providers for maintenance or repair;
- Unauthorized use of the Product or software can impair the Product's performance;
- This limited warranty does not warrant to covered any software, even if packaged or sold with the Products;
- Refer to the licensing agreement accompanying the software for details of your rights with respect to its use;
- This limited warranty does not warrant that the operation of the product will be uninterrupted or error-free;
- This warranty cannot be transferred from the original end-user to others for any such transfer.

### **3. NOT A MEDICAL DEVICE.**

The products are not medical devices and are not intended to be used as a medical devices.

### **4. DISCLAIMER OF WARRANTIES.**

EXCEPT AS STATED ABOVE IN SECTION 1 OF THIS LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CHEEGO DISCLAIMS ALL EXPRESS, IMPLIED, AND STATUTORY WARRANTIES AND CONDITIONS WITH RESPECT TO THE PRODUCT, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CHEEGO ALSO LIMITS THE DURATION OF ANY APPLICABLE IMPLIED WARRANTIES OR CONDITIONS TO THE DURATION OF THIS LIMITED WARRANTY. FOR THE AVOIDANCE OF DOUBT, NOTHING IN THIS CLAUSE 6 IS INTENDED TO EXCLUDE ANY WARRANTIES OR GUARANTEES WHICH CANNOT BE EXCLUDED UNDER APPLICABLE LAWS.

### **5. YOUR RIGHTS AND THIS LIMITED WARRANTY.**

WE LIMIT THE APPLICABILITY OF IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO THE DURATION OF THIS LIMITED WARRANTY. TO THE EXTENT PERMITTED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES OF ANY KIND. SOME STATES AND COUNTRIES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. OUR SOLE LIABILITY FOR ANY DEFECT SHALL BE AS SET FORTH IN THIS LIMITED WARRANTY AND EXCLUDES ANY CLAIMS FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES AND COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NO PERSON OR ENTITY IS AUTHORIZED TO MAKE ANY OTHER WARRANTY ON OUR BEHALF. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.



[www.icheego.com](http://www.icheego.com)  
[support@icheego.com](mailto:support@icheego.com)